

Date Code Label
Here



Owner's Manual Battery Ride-On Scooter



© Copyright Huffy Corporation 2019



This manual contains important safety, assembly, operation and maintenance information. Please read and fully understand this manual before operation.

Save this manual for future reference.



Always wear approved helmet and safety equipment when using this product.



See back page for Customer Service Information

Manual Index

Safety and Warnings	2-6
Introduction	7-9
Assembly	10
Operation	11-14
Seat Option	12-13
Maintenance	15-19
Troubleshooting	20-21
Registration	22
Warranty	23

Back Cover:

- Return and Service Contact information
- Registration QR Code Link
- Assembly QR Code Link



WARNING: The user must be **13+ years**, and weigh no more than **198 lb (90 kg)**.



IMPORTANT! Before using the unit for the first time fully charge the Battery. Battery Charger will shut off when Battery is fully charged, but **never charge longer than 12 hours**.

WARNING - TO AVOID SERIOUS INJURY:

Failure of the rider to obey the following Safety Warnings can result in serious injury or death. Check local laws governing the use of electrical vehicles.



- **ADULT RIDERS ONLY.**
- **DO NOT USE THE VEHICLE IN AN UNSAFE MANNER OR AT AN UNSAFE SPEED. Not intended for jumps - this can damage the product.**
- **CHOKING HAZARD:** Small parts, adult assembly required.
- Before using this product, fully understand the controls and safety issues. Riders must demonstrate the capability and skill to handle the vehicle and operate its controls to avoid falls or collisions.
- Obey all traffic regulations, signs, and signals.
- Before each ride, check that the steering system is correctly adjusted and that all connection components are firmly secured and not broken.
- While using the product, keep hands and fingers away from wheels and other moving parts to avoid danger of pinching or entrapment.
- Riders should always wear a properly fitted helmet that complies with U.S. Consumer Product Safety Commission (CPSC) Standard 16 CFR 1203 or equivalent standard for your country.
- **Always wear shoes.** Gloves, knee and elbow pads recommended.
- Ride on the correct side of the road, in a single file, and in a straight line.
- There are additional hazards of using the vehicle in areas other than private grounds.
- If possible, avoid riding at night, dusk, dawn and any other time of poor visibility.
- **IF YOU MUST RIDE AT NIGHT OR AT TIME OF POOR VISIBILITY:**
 - Use a correctly installed headlight and taillight.
 - Headlights are required by all states for nighttime riding and taillights are required in some states.
 - Battery-powered lights or flashing safety lights are also recommended.
- **MAKE YOURSELF MORE VISIBLE TO MOTORISTS.**
 - **Reflectors:** For your own safety, do not ride the bicycle if the reflectors are incorrectly installed, damaged, or missing. Make sure the front and rear reflectors are vertical. Do not allow the visibility of the reflectors to be blocked by clothing or other articles. Clean the reflectors, as necessary, with soap and a damp cloth.
 - Wear light-colored or reflective clothing, such as a reflective vest and reflective bands for your arms and legs.
 - Use reflective tape on your helmet.
- **USE EXTRA CAUTION IN WET WEATHER:**
 - Ride slowly on damp surfaces because the tires will slide more easily.
 - Allow increased braking distance in wet weather.
- **AVOID HAZARDS TO PREVENT LOSS OF CONTROL OR DAMAGE TO YOUR WHEELS:**
 - Be aware of drain grates, soft road edges, gravel or sand, pot holes or ruts, wet leaves, or uneven paving.
 - Cross railroad tracks at a right angle to prevent the loss of control.
 - Do not carry any passengers.
 - Do not carry any items or attach anything to your bicycle that could hinder your vision,

! WARNING - TO AVOID SERIOUS INJURY:

- hearing, or control.
- Do not ride with both hands off the handlebar.
- Do not tow or push the product.
- Do not modify the product.
- Replace worn or broken parts immediately with original equipment.
- If anything does not operate properly, discontinue use.
- **DO NOT TAMPER WITH THE ELECTRICAL SYSTEM:** Doing so may create a short, causing the fuse to trip or other damage including fire.
- **Risk of Fire:** Do not bypass fuse. Replace only with original size and type.
- The supply terminals are not to be short-circuited
- Non-rechargeable batteries are not to be recharged
- Batteries are to be inserted with the correct polarity
- Rechargeable batteries are only to be charged by adults.
- The battery chargers used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until the damage has been repaired.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Do not use the vehicle in unsafe conditions such as snow, rain, loose dirt, mud sand or fine gravel. This may result in unexpected action such as tip over and skidding. Using the vehicle in loose dirt, mud, sand, or fine gravel may damage the electronics and gear box inside the vehicle.
- Do not overload the vehicle. Do not drive in very hot weather, components may overheat. Do not allow water or other liquids to come in contact with the battery or other electric components.

! WARNING: ALWAYS WEAR YOUR HELMET WHEN RIDING THIS PRODUCT!

- Helmet should sit level on your head and low on your forehead. Exposed forehead can result in serious injury.
- Adjust the strap sliders below the ear on both sides.
- Buckle the chin strap. Adjust strap until it is snug.
- No more than two fingers should fit between the strap and your chin.
- A proper fitting helmet should be comfortable and not rock forward/backward or side to side.

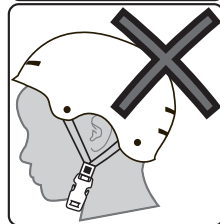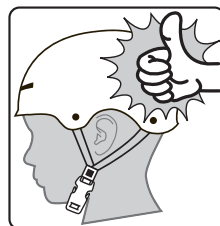

Lithium-Ion Battery & charger Warnings:




The following safety hazards may result in serious injury or death to the user of the vehicle:

- Battery Charger for Indoor use only. Use of a battery or charger other than the supplied rechargeable battery and charger may cause a fire or explosion. Only use the supplied rechargeable battery (or lead-acid or lithium suitable replacement) and charger with the vehicle.
- Using the rechargeable battery and charger for any other product may result in overheating, fire or explosion. Never use the rechargeable battery and charger with another product.
- Explosive gases are created during charging. Charge the battery in a well ventilated area. Do not charge the battery near heat or flammable materials.
- Contact between the positive and negative terminals may result in fire or explosion. Avoid direct contact between the terminals. Picking up the battery by the wires or charger can cause damage to the battery and may result in a fire. Always pick up the battery by its case or handles.
- Battery must be handled by adults only. Liquids on the battery may cause fire or electric shock. Always keep all liquids away from the battery and keep the battery dry.
 - Contact or exposure to battery leakage (lead acid) may cause serious injury. If contact or exposure occurs immediately call your physician. If the chemical is on the skin or in the eyes, flush with cool water for 15 minutes. If the chemical was swallowed, immediately give the person water or milk. Do not give water or milk if the patient is vomiting or has a decreased level of alertness. Do not induce vomiting.
- Battery Posts, terminals and related accessories contain lead and lead compounds (acid), chemicals known to cause cancer, reproductive harm and are toxic and corrosive. Never open the battery.
- Tampering or modifying the electric circuit system may cause a shock, fire or explosion and permanently damage the system. Exposed wiring and circuitry in the charger may cause electric shock. Always keep the charger housing closed.
- Non-rechargeable batteries are not to be recharged.
- Batteries are to be inserted with the correct polarity
- The supply terminals are not to be short-circuited.
- Batteries are only to be charged by adults.
- The battery chargers used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until the damage has been repaired.
- All large lithium batteries are a potential fire risk and should be charged in a safe place, preferably outside or in the middle of a garage floor.
- Never charge a lithium battery unsupervised inside a house or building.
- Only an adult who has read and understands the safety warnings should handle, charge or recharge of the battery.

Warnings and Safety

- Units shall not be operated to perform racing, stunt riding, or other maneuvers, which may cause loss of control, or may cause uncontrolled operator/passenger actions or reactions.
- Before each cycle of operation, the operator shall perform the pre-operation checks specified by the manufacturer:
 - That all guards and pads originally supplied by the manufacturer are in proper place and in serviceable condition
 - That all safety labels are in place and understood by the operator and any passenger
 - That any and all axle guards, chain guards, or other covers or guards supplied by the manufacturer are in place and in serviceable condition
 - That tires are in good condition, inflated properly, and have sufficient tread remaining.
- Persons with the following conditions shall be cautioned not to operate:
 - Those with heart conditions;
 - Pregnant women;
 - Persons with head, back, or neck ailments, or prior surgeries to those areas of the body;
 - Persons with any mental or physical conditions that may make them susceptible to injury or impair their physical dexterity or mental capabilities to recognize, understand, and perform all of the safety instructions and to be able to assume the hazards inherent in unit use.
- Components shall be maintained and repaired in accordance with the manufacturer's specifications and using only the manufacturer's authorized replacement parts with installation performed by dealers or other skilled persons.

Radio Frequency Information

 **CAUTION:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: **(1)** this device may not cause harmful interference, **(2)** this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Introduction to Assembly


This Owner's Manual may be made for several different style products.

- Some illustrations may vary slightly from the actual product.
- Follow instructions completely.
- If the product has any parts that are not described in this manual, look for separate "Special Instructions" that are supplied with the unit.
- All features, components and accessories are not included on all models.
- Use the Index page to locate specific sections of this manual.
- Please read through this entire manual before beginning assembly or maintenance.
- If you are not confident with assembling this unit, contact customer service.

! WARNING: Keep small parts away from children during assembly.


NOTE: All of the directions (right, left, front, rear, etc.) in this manual are as seen by the rider while seated.

Do not dispose of the carton and packaging until you complete the assembly of the product. This can prevent accidentally discarding parts of the unit.

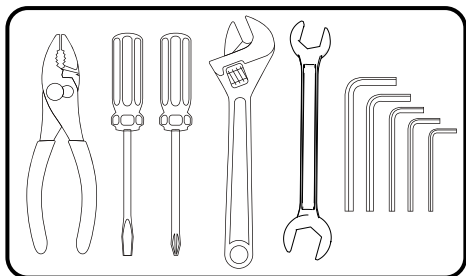


Tools Recommended

 1 DIAGRAM



4x Screws

 


Charger



Allen Wrench



Electric Scooter

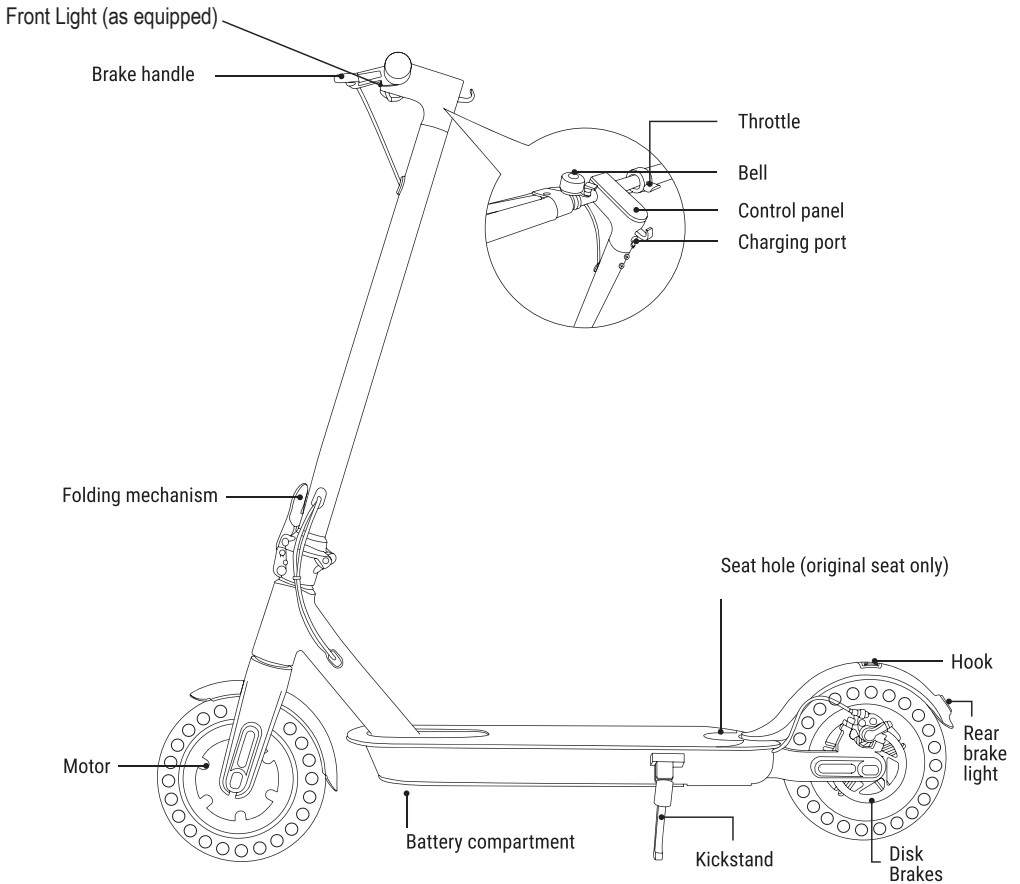

2 CONTROL PANEL

Power button

To turn the scooter on press the power button, to turn it off, press and hold for five seconds. When the scooter is on, press one time will activate/desactivate front headlight, double-tap to change speed mode.


Battery indicator

There is a speedometer and a battery indicator on the screen. When the battery is completely charged, there will be five bars. These will disappear as the battery runs out. One bar left means the battery is running low; please charge it before the next use.

Mode

The S letter light either red or green. Double-tap to change the riding mode. Red indicates sports mode, and green light indicates comfort mode.

3 CHARGING

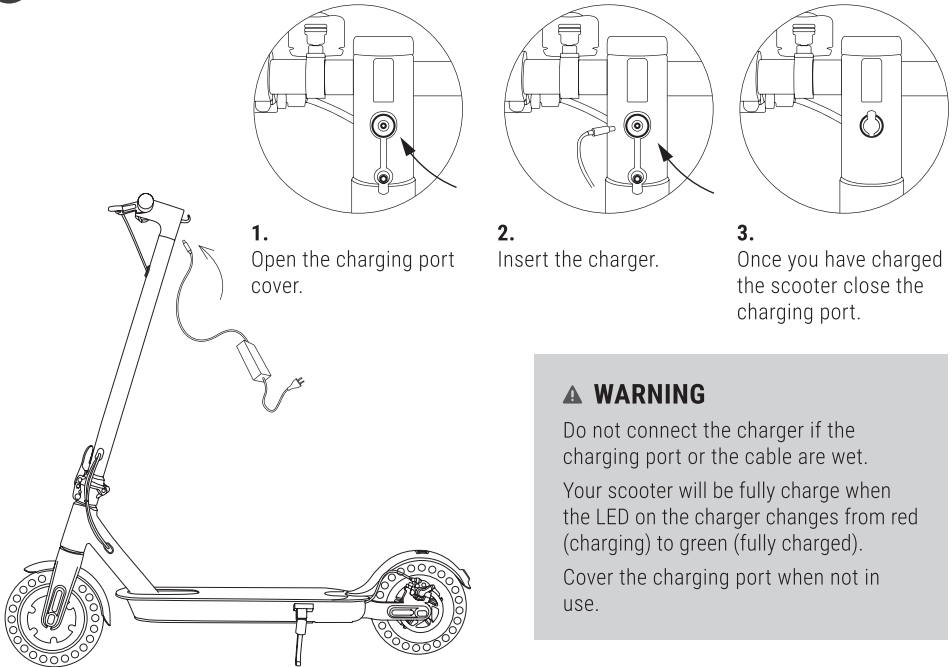


WARNING

Do not connect the charger if the charging port or the cable are wet.


Your scooter will be fully charge when the LED on the charger changes from red (charging) to green (fully charged).

Cover the charging port when not in use.



4 ASSEMBLY INSTRUCTIONS

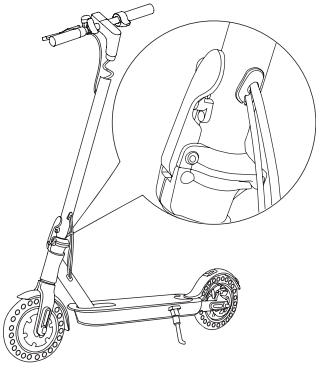


1. Unfold the stem and push it until you hear a click. Then unfold the kickstand to support the scooter.

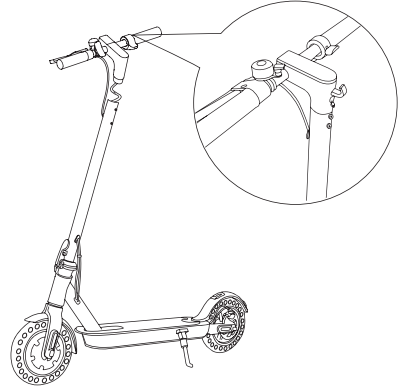

2. Slide the handlebar onto the stem. Make sure it's the right way round.

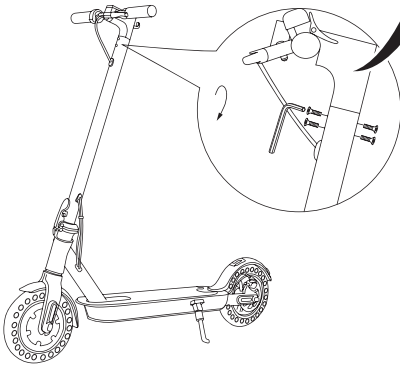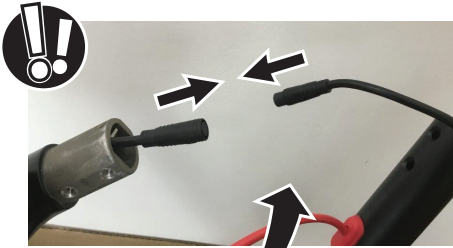



3. Screw four of the screws provided (two on each side) with the provided Allen wrench.

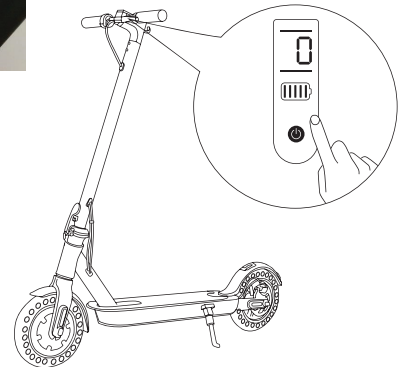


4. Ensure your scooter powers on and off.

5 LEARNING TO RIDE YOUR ELECTRIC SCOOTER

Turn on the scooter and check the battery level. If the battery level is low, please, charge the scooter.

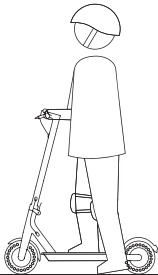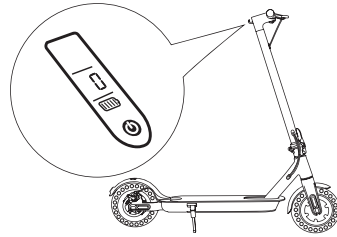


Stand on the base with one foot and propel yourself with the other foot.

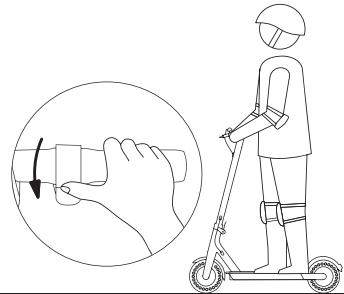


For further stability, put your other foot on the base. Press the throttle to speed up once you are balanced.

Note: For your safety, the motor will not engage until the scooter reached 5km/h.

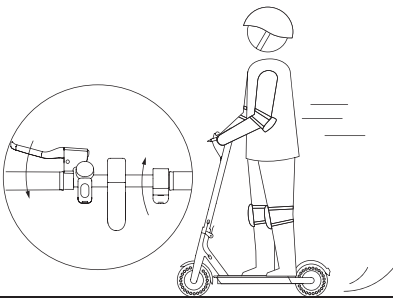

Slow down by releasing the throttle. To break, either press the electronic brake.

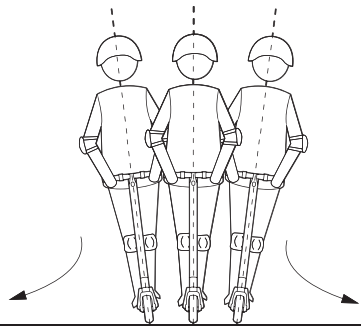

To turn, shift your body weight and turn the handlebar slightly.

Seat Option Assembly



STEPS:

<< SEE IMAGES

1. Seat components **a, b, c**
2. Insert seat post **b** into seat **a**
3. Make seat post **b** vertical to seat **a**, and tighten with a wrench.
4. Insert the seat into seat tube **c**, and tighten the screw rod and press down the seat clamp as shown in the figure.
5. The seat assembly is completed
6. Insert the assembled seat bottom into the hole on the foot rest of the scooter.
7. Open the safety ring.
8. Pull open the fixed handle, and move the seat post downward.
9. Tighten screw with a hexagonal
10. Fasten the fixed handle.
11. Lock the safety ring.
12. Seat assembly completed.



WARNING: You must use strong force to move the Quick Release Lever securely to the “**CLOSE**” position. This ensures that the seat does not move during normal operation.

6 WARNING

- ⚠ While riding, please wear a helmet and protective equipment at all times.
- ⚠ Do not ride the scooter in the rain.
- ⚠ Do not ride over potholes or other bumps.
- ⚠ Watch your head when passing through doorways.
- ⚠ Watch your speed when driving downhill.
- ⚠ Do not press the throttle when walking with the scooter.
- ⚠ Avoid coming in contact with any obstacles.
- ⚠ Do not carry heavy objects on the handlebar.
- ⚠ Do not ride the scooter with only one foot.
- ⚠ Do not ride on public roads, motorways or highways.
- ⚠ Do not rotate the handle violently.
- ⚠ Do not ride through puddles or other bodies of water deeper than 2cm.
- ⚠ This scooter has been conceived to be driven by one person. Do not carry any passengers.
- ⚠ Do not step on the folding pedal while riding.
- ⚠ Do not touch the disk brake.
- ⚠ Do not take your hands off the handlebar while riding. Use both hands when riding.
- ⚠ Do not ride up and down stairs or jump over obstacles.

7 FOLDING AND CARRYING

Folding


Open the folding clamp, lower the handlebar and carefully introduce the hook located on the rear fender in the buckle that's on the handlebar.

To unfold the scooter, gently hold the rear fender and release the hook from the buckle, lift the handlebar until it's in the upright position and lock the folding clamp.

For safety reasons, make sure the folding clamp is securely locked.

Carrying

When your scooter is folded, simply lift it by the stem to carry it.

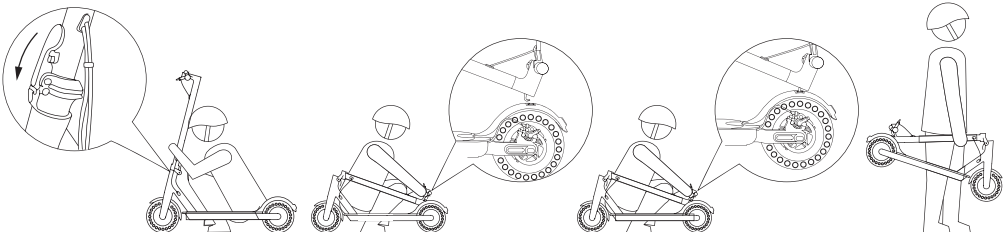

8 MAINTENANCE

If the Electric Scooter is stained/dirty, you can use a damp cloth to wipe it over. If the stain is difficult to clean, use a small amount of soap and a clean toothbrush, then wipe with a wet cloth.

Important! Do not use alcohol, petrol, kerosene or other corrosive or volatile chemicals, otherwise both the appearance and inner structure of the scooter can be severely damaged. Using a pressure gun for spraying is also prohibited.

⚠ WARNING

Before cleaning, make sure the scooter is turned off, the charger is unplugged and the charging port is covered, otherwise you may damage the electronic components.

When not in use, the Electric Scooter should be stored in a cool dry place, never leave it outdoors for extended periods of time. Both the Sun and hot/cold outdoor environments will accelerate the decay of the Electric Scooter appearance, tires and battery.

Battery Maintenance

- ⚠ Do not use any other battery that is not supplied by the manufacturer.
- ⚠ Do not open or remove the battery.
- ⚠ Prevents metal objects from coming into contact with the battery to avoid short-circuiting.
- ⚠ Use only the original charger to avoid risk of injury and fire.
- ⚠ Do dispose of batteries according to the local laws and regulations.
- ⚠ Charge the battery after each use to extend the battery's working life.

Do not use, nor store your scooter in environments in which the temperatures surpass 50°C (such as the inside of a car in direct sunlight) or under -20°C to avoid lithium battery failure or even explosion.

When used at room temperature (22°C), the battery range is at its best; whereas using it at temperatures below 0°C can decrease range and performance. Typically, at -20°C range can be half that of the same battery at room temperature (22°C). Battery range will recover when temperatures rise.

Note: Generally, a fully charged battery should last 120 to 180 days in standby mode. A low-power battery should last around 30-60 in standby mode. Remember to charge the battery after each use. Completely draining the battery may cause permanent damage to the battery. Electronics inside the battery record the charge-discharge cycles of the battery, damage caused by over-discharge and under-discharge will not be covered by the Warranty.

⚠ WARNING



Do not attempt to disassemble the battery. Risk of fire. No user serviceable parts inside.

⚠ WARNING

If you are not going to use the scooter for more than 30 days, we recommend that you charge the battery fully, store it in a cool, dry place and charge it fully every 60 days. Otherwise the battery may suffer damage that is not covered by the warranty.


Disk brakes debugging

If you notice that the discs are too tight, please use the Allen key counter clockwise to release the pressure from the screws on the brake disc base. Pull the brake line back so that the exposed part is slightly shorter and tighten the screws again. If you notice that the brake is too loose, loosen the screws a little, gently pull the brake line out a little and tighten the screws again.

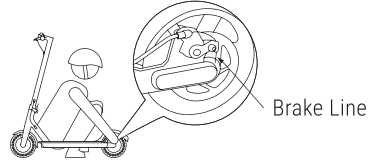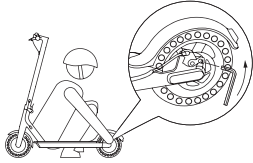


Tightening the handlebar

If you notice that the handlebar is loose, please use the Allen wrench to tighten the two screws of the folding mechanism.

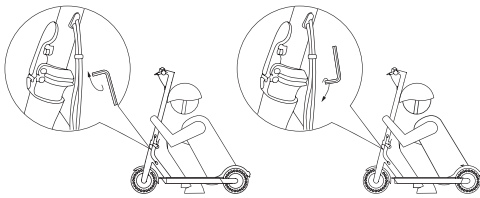

Inflating the tires (Some Models)

To inflate the wheels, turn them until the inflation valve is in an accessible position. Remove the cover and connect the inflator. When you have inflated them, remove the inflator and put the cover back on, making sure it is tight.

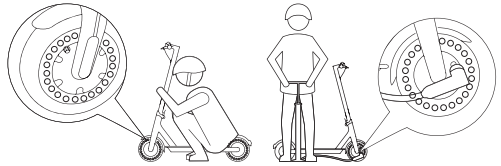

9 SAFETY INSTRUCTIONS

Please observe local traffic laws and regulations when driving the scooter.

As soon as the scooter steps on the road, there is a risk, regardless of whether you follow all the instructions, as you are exposed to reckless driving by other vehicles.

Keep in mind that the faster you go, the longer the braking distance, and emergency braking on slippery surfaces can cause skids and falls due to loss of balance. If you are not familiar with the terrain, please slow down.

Pay attention when riding the Electric Scooter, keeping in mind people who are around you and their belongings.

Do not let others ride your device unless they have also read and understood this manual.

Before using the Electric Scooter, make sure that both the tires and the rest of its components are in good condition. If you find anything out of the ordinary, revise maintenance.

10 SPECIFICATIONS

	Item	Electric Scooter
Dimensions	Unfolded (Length. x Width x Height)	116*43*120cm
	Folded (Length. x Width x Height)	116*43*49cm
Weight	Net Weight	14KG
Scooter	Max. Speed	25KM/H (15M/H) - 20KM/H / (12M/H)
	Max. Range	18-23KM
	Max. Slope	15°
	Operating Temperature	0-40 °C
	IP Rating	IP54
Battery	Voltage	36V DC
	Max. Charging Voltage	42V DC
	Capacity	7.5AH
Motor	Nominal Power	250W
Charger	Input Voltage	110V ~ 240V
	Output Voltage	42V DC
	Output Current	1.5A
	Charging Time	5.5-6.5 hours

1. The maximum cruising speed is measured at the temperature of 25 °C, the payload of 60kg, full electric voltage and flat pavement. The factors like driving habit, environmental temperature, road surface condition, payload etc. will affect the max speed.
2. The traveling range is measured at the temperature of 25 °C, about 15km/h, the payload of 60 kg and flat pavement. The factors like driving habit, environmental temperature, road surface condition, payload etc. will affect the continuous travel mileage.
3. The gradability is measured at the temperature of 25 °C, the payload of 60 kg. The factors like driving habit, environmental temperature, payload etc. will affect the max gradability.

Maintenance Repair and Service

GENERAL: The vehicle should be checked for damage, missing or badly worn parts before each use. If any part of the product does not operate properly – discontinue use.

- Check the tightness of the fasteners before each use. Replace any fasteners that are damaged.
- Inspect the product frequently. Failure to inspect the product and to make repairs or adjustments, as necessary, can result in injury to the rider or to others. Make sure all parts are correctly assembled and adjusted as written in this manual and any “Special Instructions”.
- Immediately replace any damaged, missing, or badly worn parts.
- Make sure all fasteners are correctly tightened as written in this manual and any “Special Instructions”. Parts that are not tight enough can be lost or operate poorly. Over tightened parts can be damaged. Make sure any replacement fasteners are the correct size and type.

- Check the tightness of the wheels:

NOTE: If the drive wheel is not tight, it will not engage the gears and the vehicle will not run.

- Ensure the battery bracket is securely in place before use.
- Store the vehicle indoors. Keep it away from sources of heat, such as stoves and heaters.
- Keep the product clean and free of dirt, dust and water. This will prolong the useful life of the product.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use automotive wax, abrasive cleaners or wash the vehicle with soap and water.

NOTE: If the instructions in this manual or any “Special Instructions” are not sufficient for you, please contact customer service.

CAUTION: Self-locking nuts and other self-locking devices may lose their effectiveness when re-used.

Lithium-Ion Battery Storage and Disposal

Do not leave batteries unused for extended periods of time, either in the product or in storage. When a battery has been unused for 6 months, check the charge status and charge or dispose of the battery as appropriate.

STORAGE:

- Charge or discharge the battery to approximately 50% of capacity before storage.
- Charge the battery to approximately 50% of capacity at least once every six months.
- Remove the battery and store it separately from the product.
- Store the battery at temperatures between 5 °C and 20 °C (41 °F and 68 °F).
- Do not store battery in extreme hot or cold temperatures.
- Wipe the battery clean with a dry cloth prior to storage. Wash cloth separate from other clothes.

BATTERY DISPOSAL:

- Lithium-ion batteries must be recycled or disposed of in an environmentally sound manner.
- Lithium-ion batteries are subject to disposal and recycling regulations that vary by country and region. Always check and follow your applicable regulations before disposing of any battery.
- Do not dispose of battery in a fire. The battery may explode or leak acid.
- Do not dispose of the battery in household trash. The incineration, land filling or mixing of sealed Li-ion/lead-acid batteries with household trash is prohibited by law.
- Return an exhausted battery to a federal or state approved Li-ion/lead-acid battery recycler. (check local battery disposal regulations).

Troubleshooting Guide

The following are examples of potential problems. Completely read through this manual and the troubleshooting guide table before calling. If you still need help resolving the problem please contact Customer Service.

NOTE: Vehicle should be turned off and fully charged before doing troubleshooting.

Problem	Possible Cause	Solution
Vehicle does not run when switch is activated	Battery wires not connected or are loose	Connect battery wires according to assembly instructions, Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor call Customer Service.
	Battery low on power	Recharge battery (see Battery: Recharge interval and time)
	Battery Charger still plugged in	Unplug Battery Charger from unit and wall
	Thermal fuse has tripped	Let Fuse reset
	Battery is dead	Replace battery (see Battery: Replacement and Disposal)
	Electrical system or motor is damaged	Call Customer Service.
Vehicle does not run very long or runs sluggishly	Battery is undercharged.	Check that the battery connectors are firmly plugged into each other when recharging (see Battery: Recharge interval and Time)
	Battery is old and cannot be fully charged	Replace battery (see Battery: Replacement and Disposal)
	Vehicle is overloaded	Reduce weight on vehicle (see user requirements and Safety Warnings)
	Vehicle is being used in harsh conditions	Avoid using vehicle in harsh conditions (see User Requirements and Safety Warnings)
Vehicle makes loud noise when in use	Chain is dry (on chain drive models)	Lubricate chain with light oil.
Loud grinding or clicking noises coming from motor or gear box	Motor or gears are damaged	Call Customer Service.
	Drive Wheel is partially engaged	Check drive wheel - to motor engagement.
Battery will not recharge	Battery connector or adapter connector is loose	Check that the battery connectors are firmly plugged into each other.
	Charger is not working	Check that the battery charger is plugged into a working wall outlet.
	Battery is dead	Replace battery.
Charger feels warm when recharging	This is normal and not a cause for concern	If excessively hot, unplug and replace.

BEFORE YOU CALL SUPPORT:

1. What is the model and date code?
2. When was the product purchased?
3. Has the product ever worked for a time or has never worked at all since purchase?
 - Yes, When did the product last operate correctly?
 - No, were the battery wires connected?
4. How long was the battery charged?
5. Is the charger plugged into the unit when you try to operate the product?
 - (The unit will not operate with charger plugged in)
6. Do any lights or sounds come on when you power the product on?
 - Yes, Does the lights and sounds go away when you press the drive switch?
7. When you press the drive switch, does an electric motor start?
 - Yes, Did you check that the correct drive wheel was installed?
 - Yes, Does the insert in the gearbox rotate?

Identification Record and Registration

NOTE: This information is only available on the product itself.

BICYCLES:

Each bicycle has a Recovery Code stamped into the frame. The Recovery Code can be found on the bottom of the crank housing or the bottom of the frame.

FOR PRODUCTS OTHER THAN BICYCLES, please look for the Product ID/Model number tag. Record these numbers:



Write the product number below to keep it for future reference or Service Call. If the product is stolen, give this number and a description of the product to the police. This will help them recover your property.

Recovery Code / Model Number: _____

Purchase Date: _____

Model Name: _____

Limited Warranty - US

General:

Part or model specifications are subject to change without notice.

This Limited Warranty is the only warranty for the product. ALL WARRANTIES OTHER THAN STATED HEREIN ARE DISCLAIMED INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TO THE EXTENT ALLOWABLE BY APPLICABLE LAW. ALL LIABILITY FOR INCIDENTAL, PUNITIVE, SPECIAL, OR CONSEQUENTIAL DAMAGES ARE EXPRESSLY DISCLAIMED, TO THE EXTENT ALLOWABLE BY APPLICABLE LAW.

The only uses for this product are described in this manual.

Warranty registration is not required.

The Limited Warranty extends only to the original consumer and is not transferable to anyone else.

What does this Limited Warranty cover?

This Limited Warranty covers defects in workmanship and materials for all parts of the product except those indicated below as not warranted.

What must you do to keep the Limited Warranty in effect?

This Limited Warranty is effective only if:

- Product is completely and correctly assembled.
- Product is used under normal conditions for its intended purpose (see the following section for excluded activities).
- Product receives all necessary maintenance and adjustments.
- Product is used for general transportation and recreational use only.

What is not covered by this Limited Warranty?

This product is designed for recreational use only. This Limited Warranty does not cover normal wear and tear, normal maintenance items, or any damage, failure, or loss that is caused by improper assembly, maintenance, adjustment, storage, or use of the product. This Limited Warranty does not extend to future performance.

This Limited Warranty will be void if the product is ever:

- Used in any competitive sport
- Used for stunt riding, jumping, aerobatics or similar activity
- Modified in any way

- Modified with the addition of a motor
- Ridden by more than one person at a time
- Rented, sold, or given away
- Used in a manner contrary to the instructions and warnings in this Owner's Manual

What will The Manufacturer do?

Manufacturer's sole and exclusive obligation under this Limited Warranty is to repair and/or replace, at its sole option, any covered defect in workmanship or materials.

How do you get service?

Contact the Customer Service Department.

- See included list for Customer Contact information.

What rights do you have?

This Limited Warranty gives you specific legal rights. You may also have other rights which vary from State to State.

For how long does this Limited Warranty last?

- When used in this Limited Warranty, the phrase "for life" means for as long as the original consumer owns the product.
- Drive Battery - 90 days
- Electronics - 90 days
- All other Components - 6 months



[MÉXICO]

ANTES DE DEVOLVER EL PRODUCTO A LA TIENDA:

Comuníquese Con Servicio Al Cliente De Huffy. Nos

Complace Ayudarlo Con Cualquier Parte O Problema De Ensamblado Que Pudiera Tener.

Para obtener Servicio al cliente rápido, visite:

www.huffybikes.com/

¡ LLAME AL TEL: 01800 1483 391 (Mexico only)

Para comunicarse por correo electrónico: servicio.mexico@huffy.com

[In the US and Canada]

PLEASE

BEFORE RETURNING TO STORE:

Contact Huffy Customer Service. We are glad to assist you with any parts or assembly problems you might have!

~

VEUILLEZ NOTER : AVANT DE RETOURNER AU MAGASIN :

Communiquez avec le service à la clientèle de Huffy. Nous vous aiderons volontiers avec tout problème concernant les pièces ou le montage!

For Fast Customer Service:

Pour un Service à la clientèle rapide :

www.huffybikes.com/contact

To Order Parts (US):

Pour obtenir des pièces (CANADA) :

www.huffybikes.com/parts

OR TEL: 1 800 872 2453 (US)

OU appelez le 1 800 872 2453 (CANADA)

For e-mail: www.huffybikes.com/contact

Pour communiquer par courriel : huffycanada@huffy.com

www.huffybikes.com/home/globalcontact/

for current contact information / para obtener la información de contacto actual /
pour les informations de contact actuelles



**For ASSEMBLY Help:
Ayuda de la ASAMBLEA:
Aide à l'ASSEMBLAGE :**

**Please REGISTER your Product!
Por favor, REGISTRE su producto!
L'ENREGISTREMENT de produit !**

